

Περιγραφή πλήκτρων συσκευής Grandstream GXP1625

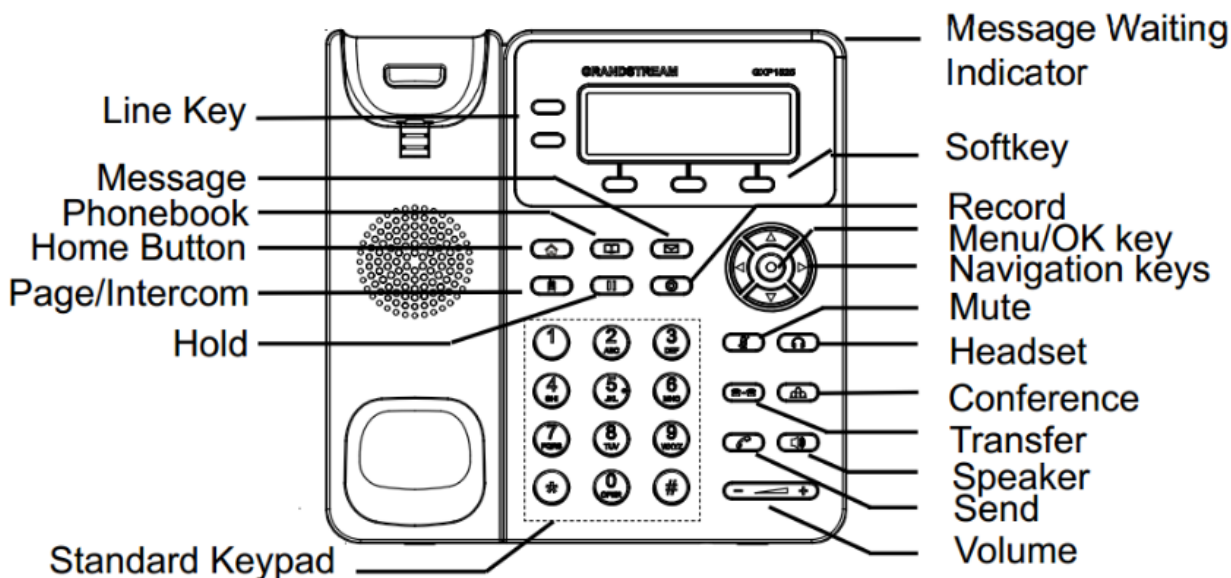 



 





 






Figure 5: GXP16xx Front View (GXP162x as example)

<p>LINE Key</p>	<p>Switch between line 1 and line 2.</p> <p>Solid Green: Calling, Talking.</p> <p>Flash Green: Call on hold.</p> <p>Flash Red: Incoming call.</p>
<p>Softkeys</p>	<p>The softkeys are context sensitive and will change depending on the status of the phone.</p>
	<p>Messages.</p> <p>Press to view messages.</p>
	<p>Phonebook.</p> <p>Press to view Contacts.</p>
	<p>Home.</p> <p>Press to go to idle screen, when stay in submenu.</p>
	<p>Page/Intercom.</p> <p>If the intercom number has set, call this number directly.</p> <p>If the intercom number has not set, press this key will have no effect.</p>
	<p>Hold. Place active call on hold or resume the call on hold.</p>

	<p>Navigation Keys.</p> <p><u>When entered the menu:</u></p> <p>Press the UP/DOWN keys to scroll through menu options.</p> <p>Press the LEFT key to go back to the previous menu.</p> <p>The RIGHT key has no function.</p> <p><u>In Idle:</u></p> <p>Press the UP key to view missed calls.</p> <p>Press the DOWN key to view dialed calls.</p> <p>Press the RIGHT key to view answered calls.</p>
	<p>Menu/OK Key.</p> <p><u>In Idle:</u></p> <p>Press to enter the main menu.</p> <p>Confirm the current selection or the inputted info.</p> <p><u>Off hook:</u></p> <p>Switch between outgoing call and paging call.</p>
	<p>Mute.</p> <p>To mute/unmute an active call.</p> <p><u>When DND is on:</u> Enable/disable DND when the phone is in idle.</p>
	<p>Headset.</p> <p>Press to switch between headset and handset mode in an active call.</p>
	<p>Transfer.</p> <p>Transfer an active call to another number.</p>
	<p>Conference.</p> <p>Establish 3-way conference with other 2 parties.</p>
	<p>Send.</p> <p><u>Send.</u> Enter the digits and then press Send to dial out.</p> <p><u>Redial.</u> Redial when there is a previously dialed call.</p>
	<p>Speaker.</p> <p>Press to switch between speaker and handset mode in an active call.</p>

 Τα πλήκτρα: **Page/Intercrom, Record & Message** δεν είναι ενεργοποιημένα.

From:

<https://wiki.noc.uniwa.gr/> - **UNIWA NOC Documentation Wiki**

Permanent link:

https://wiki.noc.uniwa.gr/doku.php?id=phone_buttons

Last update: **2022/07/07 13:13**

