

Περιγραφή πλήκτρων συσκευής Grandstream GXP1625

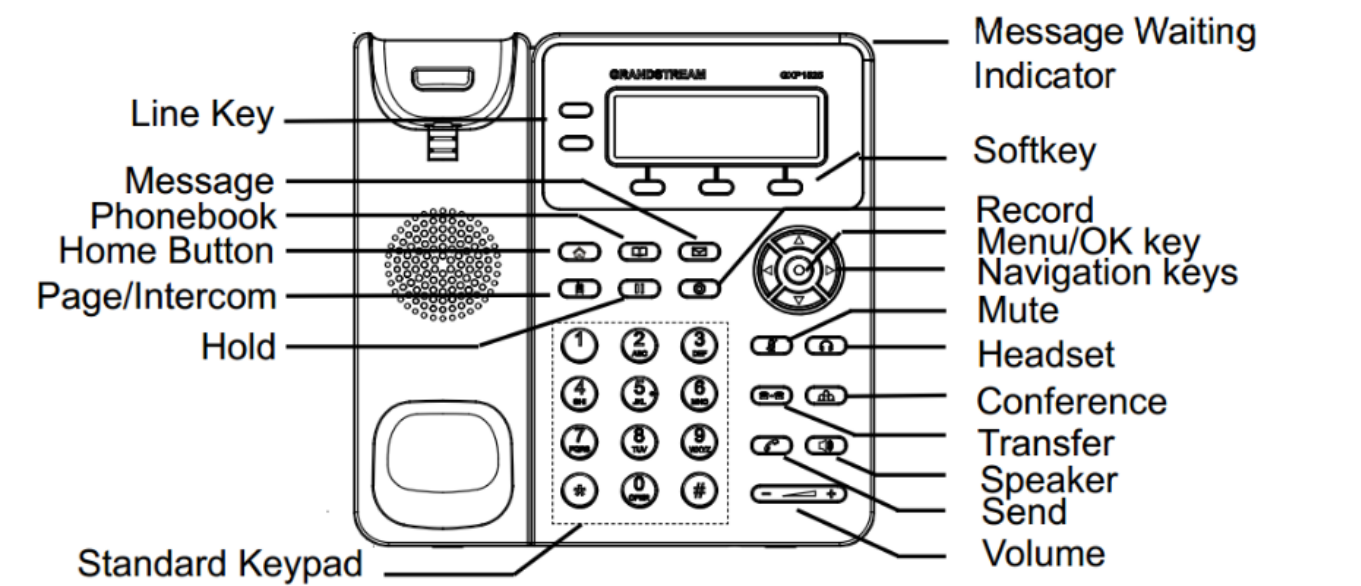
 


Figure 5: GXP16xx Front View (GXP162x as example)

|                                                                                     |                                                                                                                                                                |
|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| LINE Key                                                                            | Switch between line 1 and line 2.<br><b>Solid Green:</b> Calling, Talking.<br><b>Flash Green:</b> Call on hold.<br><b>Flash Red:</b> Incoming call.            |
| Softkeys                                                                            | The softkeys are context sensitive and will change depending on the status of the phone.                                                                       |
|  | <b>Messages.</b><br>Press to view messages.                                                                                                                    |
|  | <b>Phonebook.</b><br>Press to view Contacts.                                                                                                                   |
|  | <b>Home.</b><br>Press to go to idle screen, when stay in submenu.                                                                                              |
|  | <b>Page/Intercom.</b><br>If the intercom number has set, call this number directly.<br>If the intercom number has not set, press this key will have no effect. |
|  | <b>Hold.</b> Place active call on hold or resume the call on hold.                                                                                             |

**Navigation Keys.**When entered the menu:

Press the UP/DOWN keys to scroll through menu options.

Press the LEFT key to go back to the previous menu.

The RIGHT key has no function.

In Idle:

Press the UP key to view missed calls.

Press the DOWN key to view dialed calls.

Press the RIGHT key to view answered calls.

**Menu/OK Key.**In Idle:

Press to enter the main menu.

Confirm the current selection or the inputted info.

Off hook:

Switch between outgoing call and paging call.

 
**Mute.**

To mute/unmute an active call.

When DND is on: Enable/disable DND when the phone is in idle.

**Headset.**

Press to switch between headset and handset mode in an active call.

**Transfer.**

Transfer an active call to another number.

 
**Conference.**

Establish 3-way conference with other 2 parties.

**Send.**

Send. Enter the digits and then press Send to dial out.

Redial. Redial when there is a previously dialed call.

**Speaker.**

Press to switch between speaker and handset mode in an active call.



Τα πλήκτρα: **Page/Intercrom, Record & Message** δεν είναι ενεργοποιημένα.

From:

<https://estudy.teiath.gr/> - **UNIWA NOC Documentation Wiki**

Permanent link:

[https://estudy.teiath.gr/doku.php?id=phone\\_buttons](https://estudy.teiath.gr/doku.php?id=phone_buttons)

Last update: **2022/07/07 13:13**

